

# LED Wall light/ LED Wall pack UG-WL112-W80



### 1. The application of the occasions

Wall lighting area, Building facade lighting, House wall security lighting, etc.

#### 2. Features


- 1 Including series of patents, Unique funnel heat sinker, making the lamp better for heat dissipation. Fresnel teeth lighting design for the PC cover, which is suitable for wall light distribution.
- 2 The LED driver and LED light source are separated, which is convenient for

 
install and assemble.


- 3 LED driver is movable easily, which helps to replace LED driver.
- 4 Beauty for the appearance, using high bright Samsung LEDs.
- 5 Meanwell Driver are applied.
- 6 IP65.



# **3** Dimension for the product

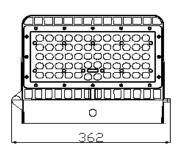



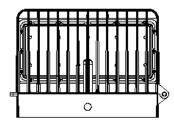


12		
		Ш
		ĥ.
_		R
		í.
		ĥ.
_		
_		Ľ.
_		H
_		H
		بخالك الكريك
		H
_		H
		Ľ
		Π
ЦΗ -	П	٦
	-	_

## 4 Main technical parameters


Item NO.	ССТ	RA	Lumens	Input Voltage	Lamp power	Product size	Packaging size	N.W			
UG-WL112-W80	5000K~5650K	≥70	7600 LM	AC90V-295V	80±3W	362*112*256 mm	415*185*330 mm	4.7KG			
IP65											
Samsung LEDs											
PF>0.9											
4000K 5000K 6000K CCT optional											
LED driver: UG Driver											
Storage Temp: $-40 \sim 50^{\circ}$ C											




### **5** Luminous Spot

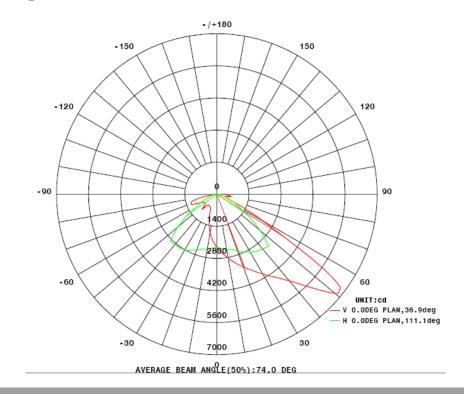


#### **6** Instruction for Installation

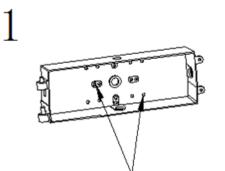


Using screws to install the power supply box onto the solid wall

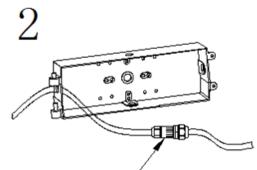

Open the wire-connecting box, connect the input wire of the LED driver with the AC input wire then close the box

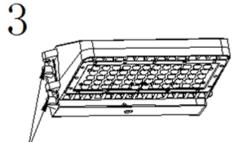

Thrust the heat sinker body into the two holes

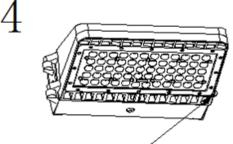

Close the body using screws and tighten them



### 7 Attentions for installation

- Cut off the power and make sure the wall can burden the weight of the lamp before install the lamp.
- Make sure the lamp correctly installed, in case of the lamp's dropping down.
- Do not use the lamp in the area with aggressive gas.
- Do not cover the lamp with anything which is harm for heat dissipation.
- Be careful and connect the ground line well.
- Warranty 3 years.
- Products faults caused by separating, remodeling or incorrectly construction are not in the warranty area.







